


REMOTE FOOT SWITCH FOR THE CT-901HP HYDRAULIC PUMP INSTALLATION INSTRUCTIONS

© Panduit Corp. 2007

1. Unplug the CT-901HP Hydraulic Pump power cord from the electrical receptacle.
2. Remove the upper (orange) cover from the CT-901HP Hydraulic Pump by removing the four (4) socket head cap screws and washers. Set the upper cover and fasteners aside.
3. Disconnect any current controller from the hydraulic pump by disconnecting the controller cable wires from the hydraulic pump. The controller cable is easily disconnected by unplugging the bullet-type disconnects. Make a note of the cable wires connections (color-coding) in the event that the controller would be re-installed.
4. Connect the CT-901RFS Remote Foot Switch to the Hydraulic Pump by connecting the foot switch cable to the pump, following the wiring diagram below. Replace cover.

- Step 1: Connect **Red** and **Black** wires from Foot Switch together. (This step may be completed at factory)
- Step 2: Connect the **Red** and **Black** on Foot Switch to the **Red** on Pump.
- Step 3: Connect the **Green** on Foot Switch to White on Pump
- Step 4: Connect the White on Foot Switch to **Black** on Pump.

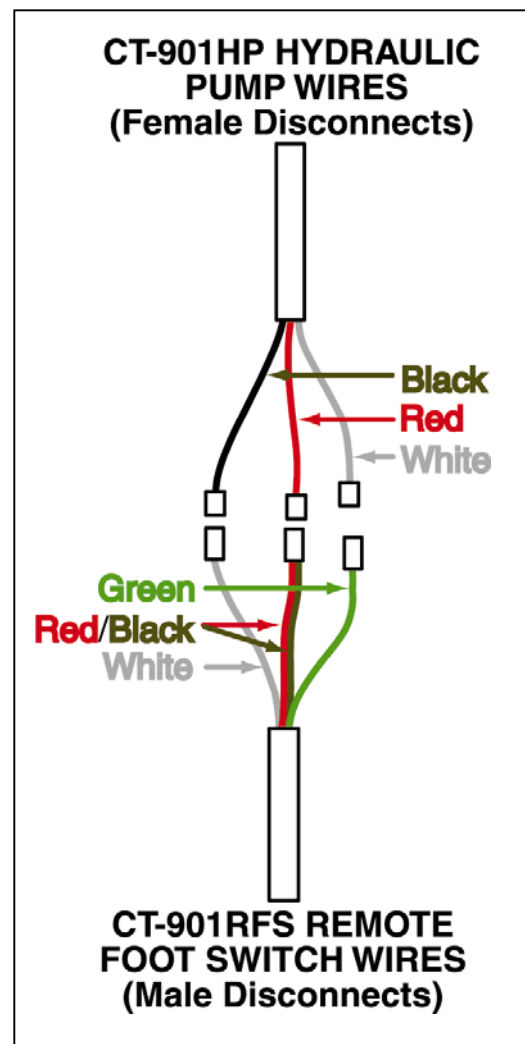

Website: www.panduit.com
Email: cs@panduit.com



For Technical Support:
888-506-5400, ext. 3255
Fax: (630) 759-7532